

Custom Pendant Assembly and Installation Instructions

CAUTION:

• BEFORE INSTALLING FIXTURE, MAKE SURE THE POWER TO THE CIRCUIT IS TURNED OFF AT THE MAIN FUSE BOX / CIRCUIT BREAKER UTILITY BOX.

Important Safety Instructions:

- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- We strongly recommend that a professional electrician install all direct wire fixtures.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- For your safety, it is strongly recommended that two people install the lighting fixture.
- This fixture has been rated for up to E26 two (2) 100-Watt maximum TYPE A standard incandescent light bulbs (not included) or two (2) 23-Watt compact fluorescent light bulbs (not included) or two (2) 9-watt SBLED light bulbs (not included). To avoid the risk of fire, do not exceed the recommended lamp wattage.
- The lighting fixture is meant for indoor use, DRY LOCATIONS ONLY.
- · Save these instructions.

WARNING:


- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.
- This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects
 and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this
 light fixture.

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety and convenience, assembly by two people is recommended.

US/CN Page 1 of 8

TOOLS REQUIRED (not included):

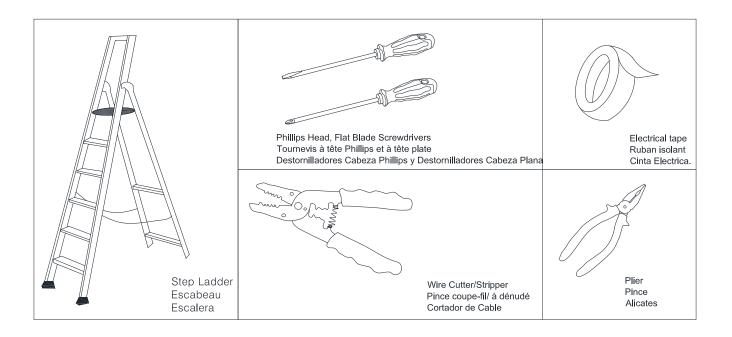


Parts Included:

- (A) Mounting Plate (1)
- (B) Threaded Tube (1)
- (C) Hanging Loop (1)
- (D) Canopy (1)
- (E) Canopy Nut (1)
- (F) Chain (1)
- (G) Closable Links with Screw Caps (2)
- (H) Fixture Loop (1)
- (I) Sockets (2)
- (J) Collar (1)
- (L) Hex Nuts (2)

Hardware Enclosed:

- (N) Green Ground Screw (1)
- (O) Mounting Screws (2)
- (P) Plastic Wire Nut Connectors (3)

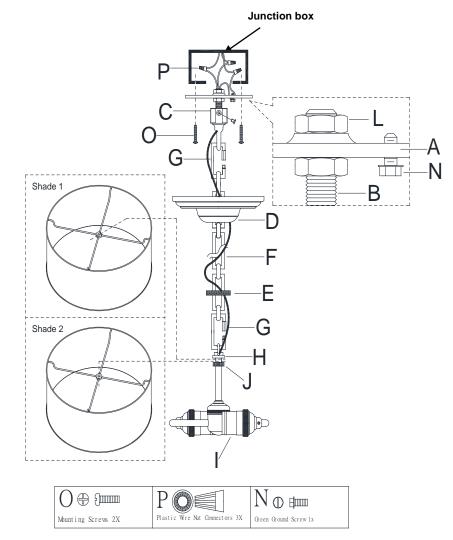


US/CN Page 2 of 8

To adjust the suspension length of the fixture:


1. Note: The adjustment or shortening of the lighting fixture's suspension length is only needed if the factory set length is not appropriate. If the parts are not already preassembled or if suspension length adjustments were not made, please use the instruction below for the proper assembly to the desired suspension length. We recommend that you adjust the lighting fixture to the proper desired length before cutting the electrical cord. Determine the lighting fixture suspension length from the ceiling for the product installation, allowing the extra cord length for the outlet junction box wire connections as noted below.

There are three hanging lengths for this light fixture as below:

- a. Remove two sections of 2 Feet chain from the closable link in the Chain. (Refer to A1 below).
- b. Remove one section of 2 Feet chain from the closable link in the Chain. (Refer to A2 below).
- c. Keep original 6 Feet chain unchanged. (Refer to A3 below)
- d. If need other length of the chain, use steel wire cutter to adjust the chain length.

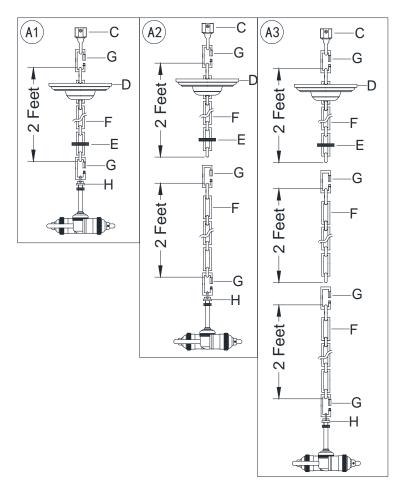


2. (See A4) If needed, cut off the extra power cord length on the 2 wire cord and bare ground wire so that they all are at least 6 inches (152.4 mm) long within the outlet junction box (J-box).

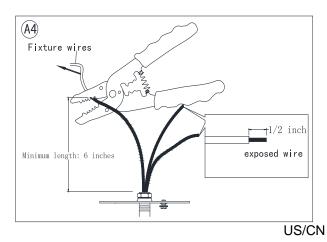


Page 3 of 8

Assembly & Installation Instructions:


- SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- Carefully unpack all fixture parts and hardware and lay them on a clear workspace

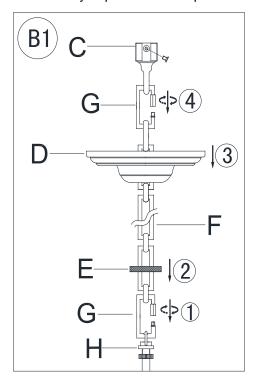

 Attach the Closable Link (G) onto the Fixture Loop (H).Slide the Canopy Nut (E) over the upper end of Chain (F).Slide the Canopy (D) over the Chain (F).Attach the remaining Closable Link (G) onto the Hanging Loop (C).

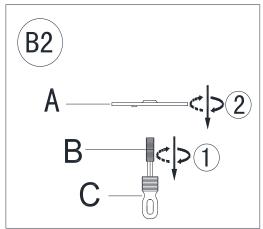


2. Attach the Threaded Tube (B) into the threaded bore of the Hanging Loop (C) and rotate the Threaded Tube (B) clockwise until it is tightly engaged within the Hanging Loop (C). Attach the Mounting Plate (A) onto the top end of the Threaded Tube (B) so that a portion of the Threaded Tube (B) extends beyond the Mounting Plate (A).

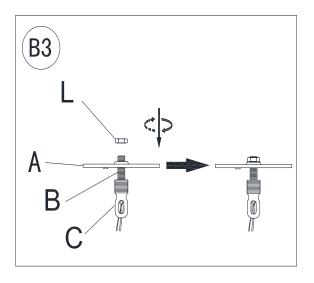


3. Position the Hex Nut (L) onto the top end of Threaded Tube (B). Tighten the Hex Nut (L) until tight using pliers so that the Hanging Loop (C) is now firmly secured to the middle of the Mounting Plate (A).


US/CN Page 4 of 8

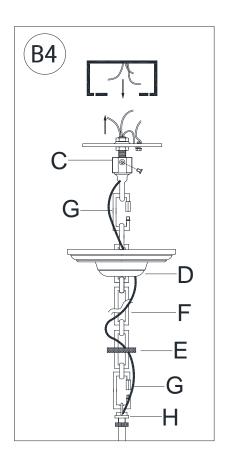

 Weave the fixtures power cord and bare ground wire through every other loop to the top of Chain (F), and then through the Hanging Loop (C) and Threaded Tube (B)

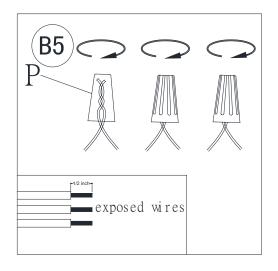


Please read the section" To Make the Wire Connections" Below.

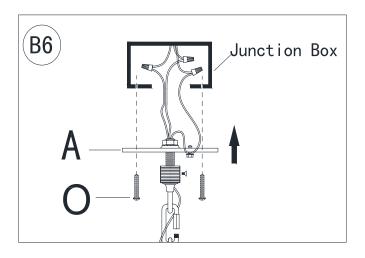


6. Attach the Mounting Plate (A) onto the junction box by using Mounting Screws (O)


US/CN Page 5 of 8

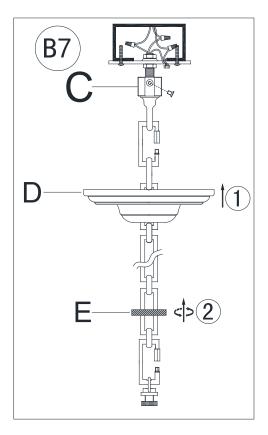

7. Slide the Canopy (D) upward along the chain with the upper rim of the canopy pressed gently against the ceiling surface. Position the Canopy Nut (E) against the Hanging Loop (C) and rotate the nut clockwise to engage it with the threaded portion of the Hanging Loop (C) until secure. Do not over tighten this nut.

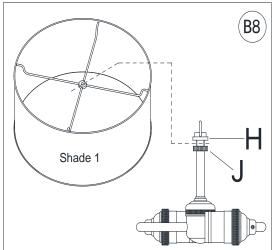


If your shade has an open ring, attach side opening
of shade spider (sold separately) to threaded section of
socket assembly and secure with by turning collar (J)
counter-clockwise direction until tight. (Refer to left
diagram)

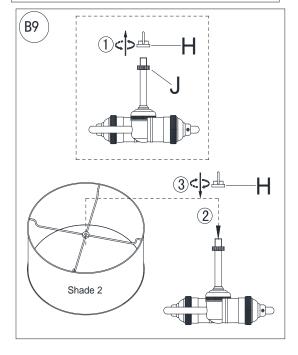

 If your shade has a closed ring, remove fixture loop (H) by turning clockwise direction and attach shade (sold separately) to the stem of socket assembly and secure by replacing fixture loop (H) (Refer to left diagram)


US/CN Page 6 of 8

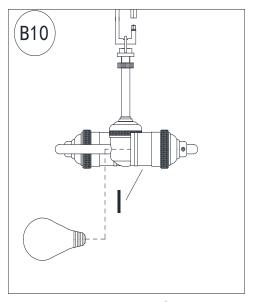

10. Insert the specified light bulbs into the Sockets (I). DO NOT EXCEED THE SPECIFIED WATTAGE.

To Make the Wire Connections:

- 1. Gently pull existing wire down from the ceiling junction box and allow wires to hang. The HOT or LIVE wire is usually black. The NEUTRAL wire is usually white. Check to see if there is a ground wire that is usually green or green with a yellow stripe or exposed copper metal wire. If needed, use a pair of wire strippers to remove about 1/2 inch of insulation from each wire.
- 2. Carefully inspect the fixtures wires. The NEUTRAL FIXTURE WIRE has FINE LONGITUDINAL RIDGES running along its length. The HOT FIXTURE WIRE is SMOOTH and the BARE COPPER WIRE is the GROUND WIRE. If you have any doubt and cannot identify the power-supply wires with confidence, then we recommend that you ask an electrician and that you not continue with the installation.
- 3. With the help of another person to hold the weight of the fixture, attach the fixture wires to the junction box wires as shown in the illustrations.

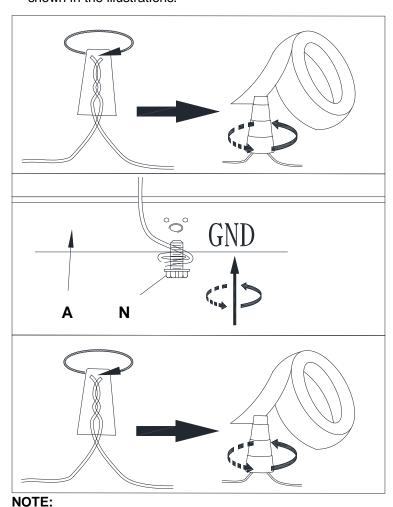

Connect the GROUND FIXTURE WIRE to the GROUND J-BOX WIRE using the Plastic Wire Nut Connector (P) and wrap the connection with electrical tape. Be sure that no wire strands are exposed.

If the junction box DOES NOT have a GROUND WIRE, wrap the fixture's bare ground wire around the Green Ground Screw (N) and insert the screw into the Mounting Plate (A), marked as "GND", and tighten screw to secure the wire.

Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL J-BOX WIRE first and then connect the HOT FIXTURE WIRE to the HOT J-BOX WIRE using the Plastic Wire Nut Connectors (P). Wrap these connections with electrical tape. Be sure that no wire strands are exposed.

US/CN Page 7 of 8

IT IS IMPERATIVE THAT THE JUNCTION BOX IN YOUR HOME BE PROPERLY GROUNDED! DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.

4. Check the wiring connections and if all looks good, gently tuck the wire connections neatly into the ceiling junction box.

Care instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

Thank you for your purchase

Stores | catalog | www.potterybarn.com

USA 1.888.779.5176

US/CN Page 8 of 8